

# Opening Instructions for

*SECURESEAL*



1

Pull the actuating handle out to the left.



2

The plunger will pop out with a "click" and the number wheels will spin to scramble the previous seal number.



3

The cable can now be removed from the latch and the vehicle opened.

**For further information and spares contact: oem group ltd**  
OEM Group Ltd. 8 Kinetic Crescent, Innova Science Park, Enfield, Middlesex. EN3 7XU  
Tel 44(0)20 8344 8777 Fax 44(0)20 8344 8778 e-mail: sales@secureseal.com

# Closing Instructions for

*SECURESEAL*



1

Ensure lock handle is fully closed.



2

Thread cable through sealing hole.



3

Pass cable around the handle.



4

Insert the stop end into the plunger on the bottom of the Securesseal unit.



5

Push the plunger fully home until a 'click' is heard. The number wheels will spin and generate a new random number.

---

## **Alternative Designs of Vehicle Latch**

Other designs of latch may require the cable to be threaded differently.

Some latches have a hole in the handle. In this case thread the cable through the hole before fitting it back into the Securesseal.

*In every case the cable must be tight to restrict movement of the handle.*

---